 


Peerless® PUREFIRE®

Low Loss Header Kit

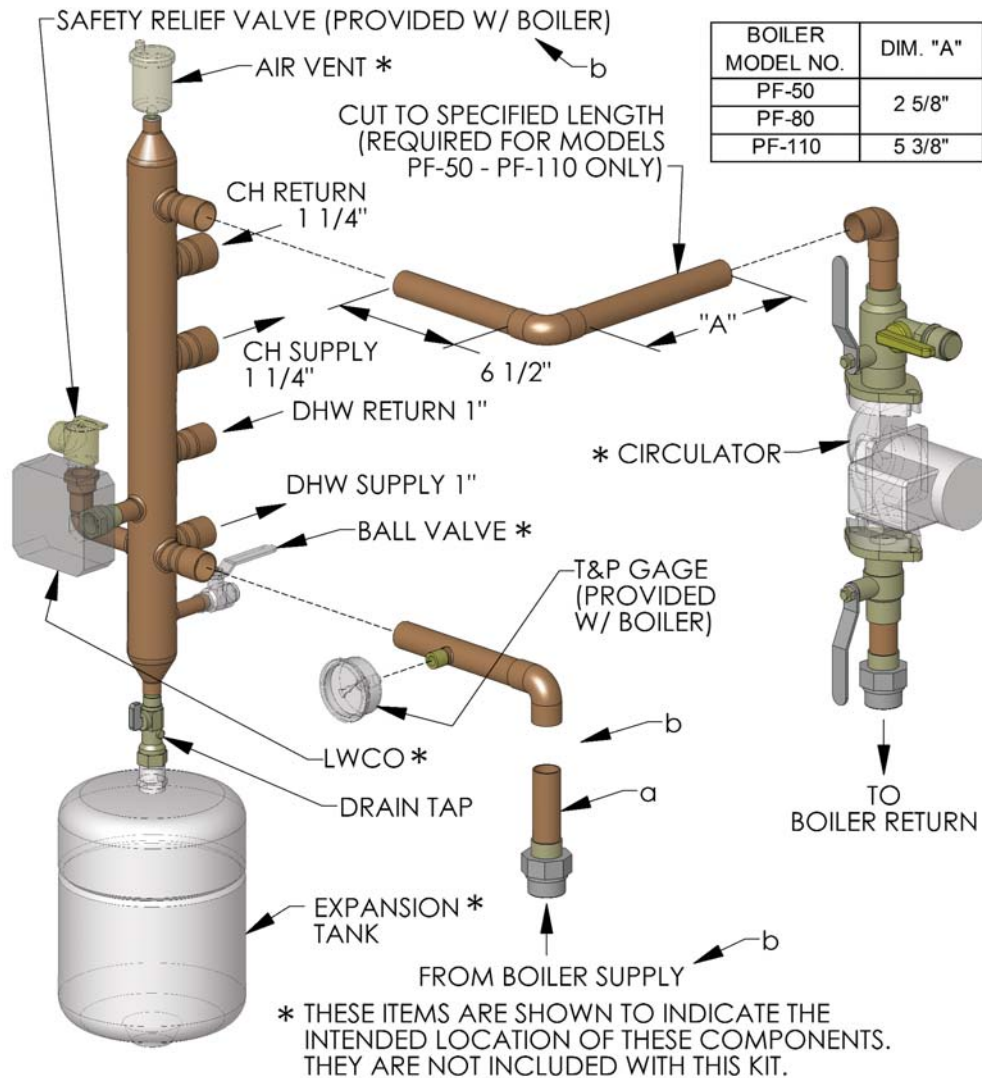 


a NOTE: CUT TO REQUIRED LENGTH AFTER CIRCULATOR/RETURN ASSEMBLY IS MOUNTED TO BOILER RETURN PIPING AND CONNECTED TO LOW LOSS HEADER.


b NOTE: CODES DO NOT ALLOW A SHUT-OFF VALVE TO BE INSTALLED BETWEEN THE BOILER SUPPLY AND THE SAFETY RELIEF VALVE MOUNTED ON THE HEADER.

Low Loss Header Kit Features

- Designed specifically for Peerless® PUREFIRE® boiler models PF-50, PF-80, PF110 and PF-140
- Eliminates need for primary/secondary piping
- Easy connections for heating system and Peerless® Partner® or other indirect water heaters

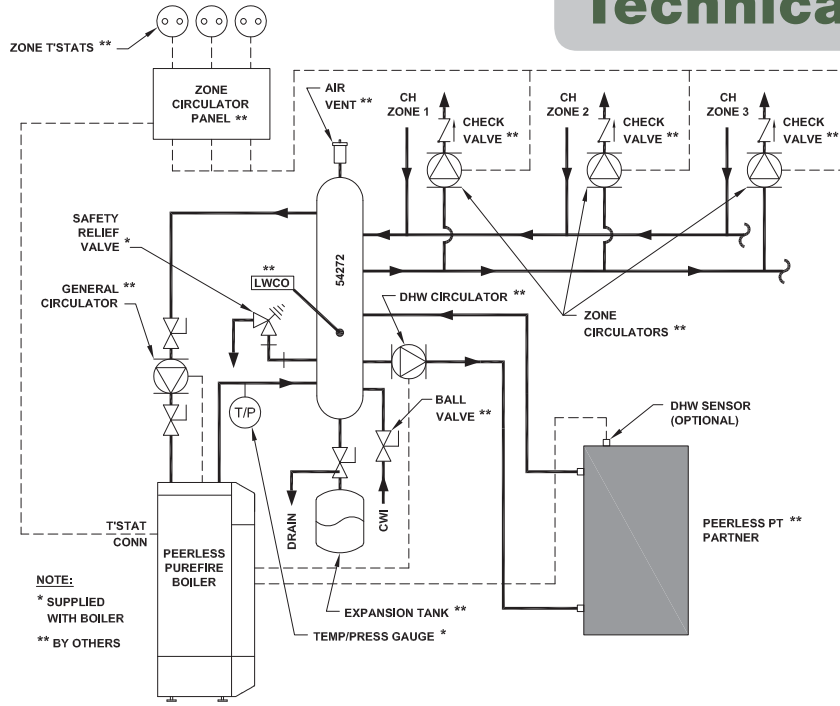

Header Kit Piping – Zone Circulators

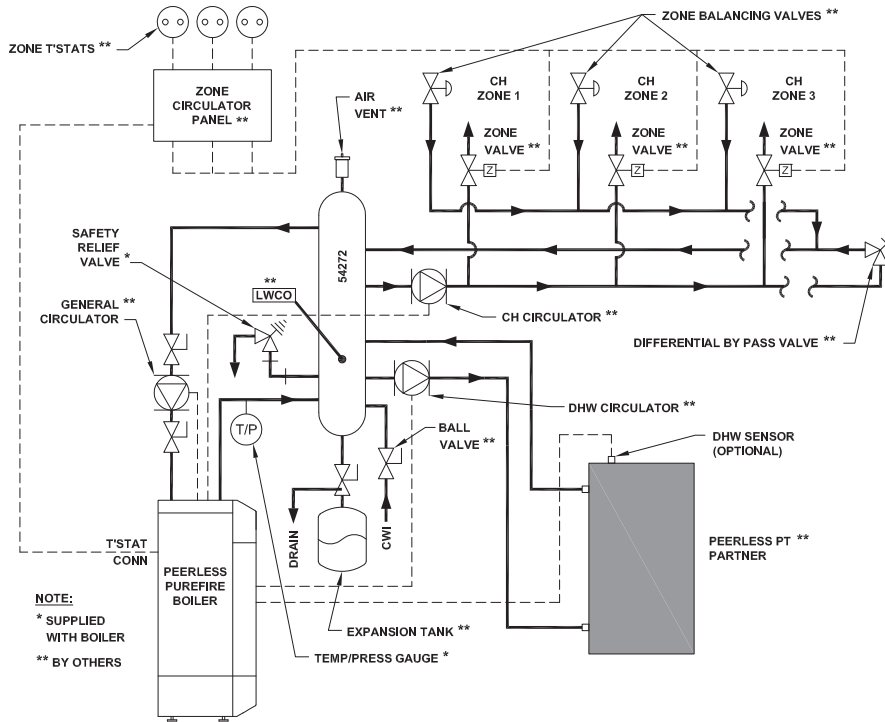 

Header Kit Piping – Zone Valves

Standard Equipment

- > Unique fittings for boiler circulator include:
 - Adjustable flanges for correct mounting of any circulator
 - Isolation valves
 - Purge valve
- > Specially-designed isolation valve and drain tap allows:
 - Safe removal of expansion tank at any time
 - Removal of accumulated system dirt
- > Other easy connections include:
 - LWCO
 - Temperature-pressure gauge
 - Air vent
 - Relief valve
 - Dielectric unions – for easy connection to boiler supply and return



PeerlessBoilers.com



Printed on Recycled Paper

PeerlessBoilers.com

CUT-LLH R2 (4/13-2.5C)
 Printed in U.S.A.
 ©2013 PB Heat, LLC. All rights reserved.